


4SN

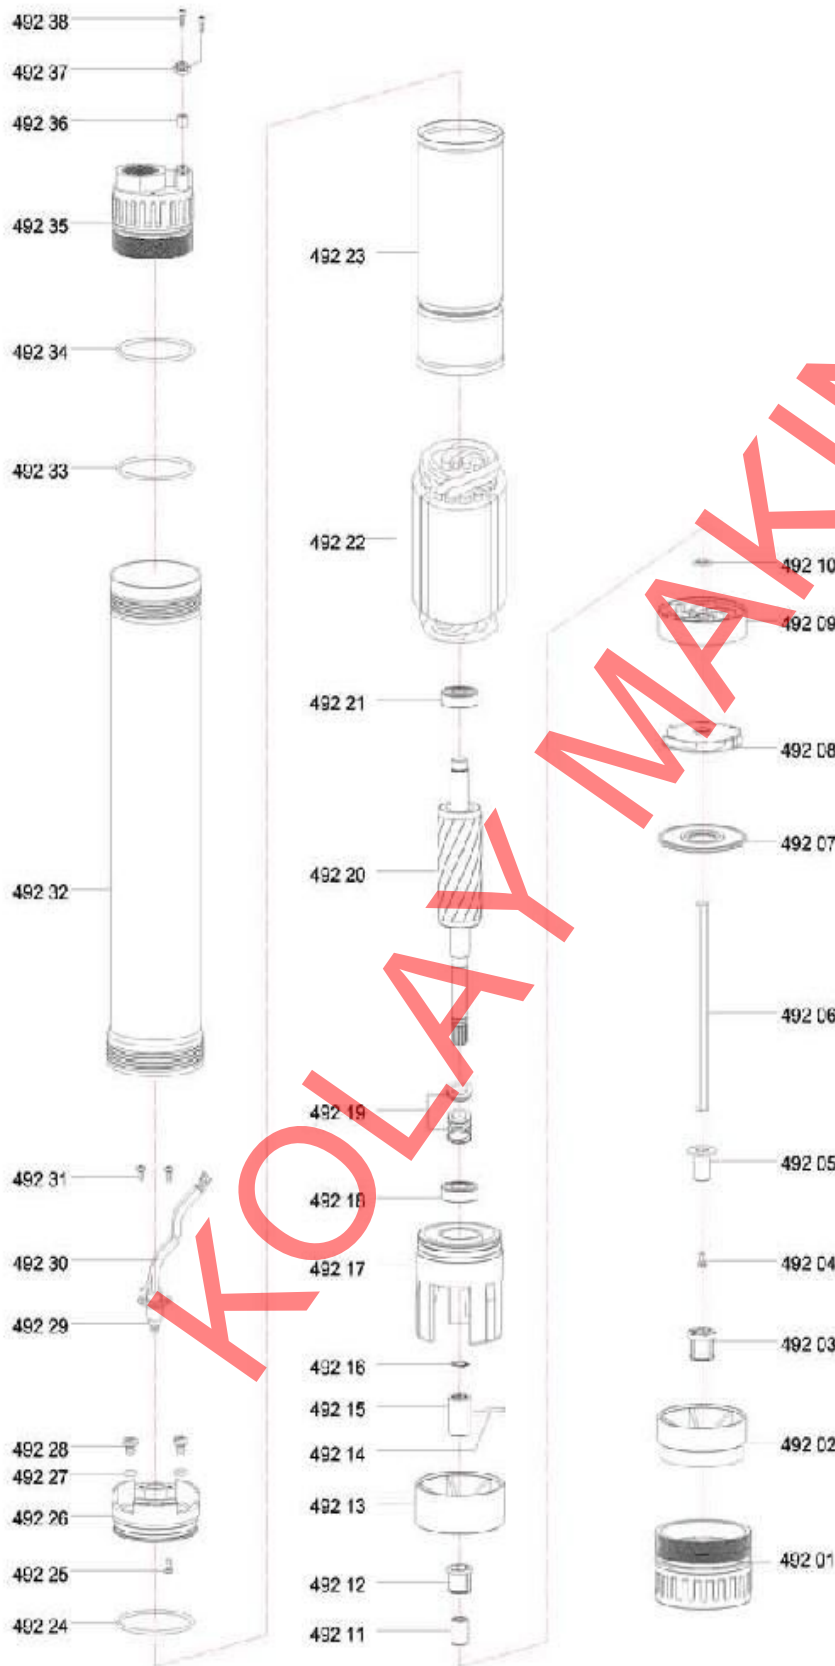

492 01	Suction support
492 02	lower support
492 03	Guide bush
492 04	Screw
492 05	Support sleeve
492 06	Shaft
492 07	Diffuser Cover
492 08	Impellor
492 09	Diffuser
492 10	Sealing gasket
492 11	Busing
492 12	Guide bush
492 13	upper support
492 14	Shaft pin
492 15	Coupling
492 16	Shaft ring
492 17	Oil chamber
492 18	Deep groove ball bearing
492 19	Mechanical seal
492 20	Motor rotor
492 21	Deep groove ball bearing
492 22	Motor stator
492 23	Motor pipe
492 24	*O*ring
492 25	Screw
492 26	Bearing seal
492 27	*O*ring
492 28	Screw
492 29	Cable shield sleeve
492 30	Cable
492 31	Screw
492 32	pump pipe
492 33	*O*ring
492 34	*O*ring
492 35	Outlet
492 36	Cable shield sleeve
492 37	Cable cover
492 38	Screw